



1345 Performer™ Adjustable Hinge Part Number: 113450000*

Before Hinge Adjustment

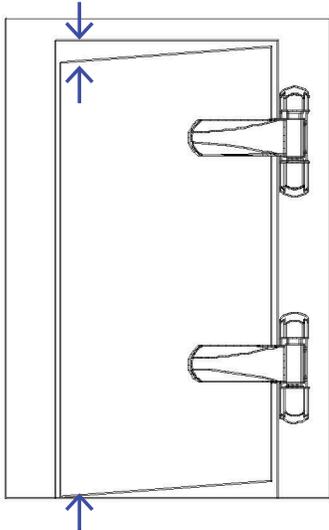

After Hinge Adjustment

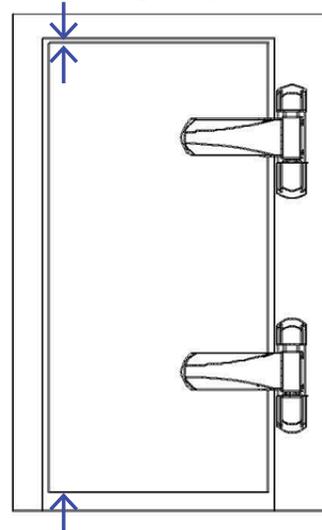

1. Remove 2 screws holding cover to hinge. (Fig. 1)
2. Gently lift cover to clear flange and slide as shown in Fig. 2
3. Loosen 4 mounting screws on each hinge. (Fig. 3)
4. Adjust door by turning top hinge adjustment screw clockwise and bottom hinge adjustment screw counter-clockwise so door spacing is even
5. Tighten 4 mounting screws on each hinge. (Fig. 3)
6. Replace cover by reversing steps 2 & 1. (Fig. 2 & Fig. 1)

Fig. 1

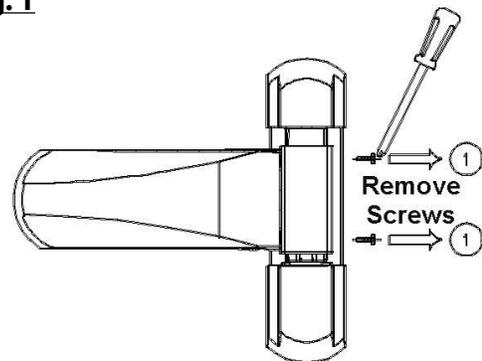


Fig. 2


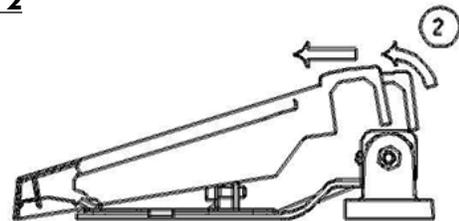


Fig. 3

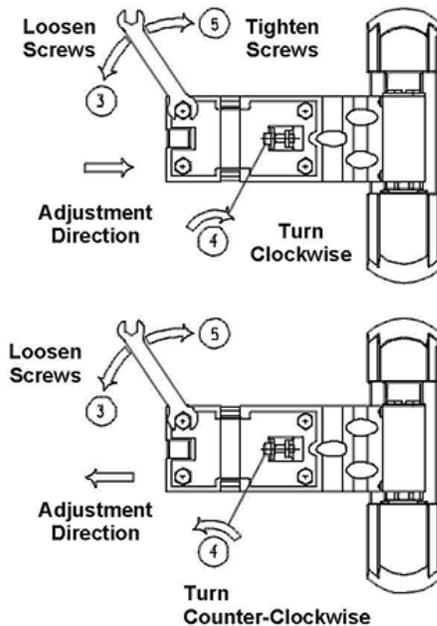

1345 Performer™ Adjustable Hinge Part Number: 1134500000*

1. To remove cover insert small pocket screwdriver between cover and flange and pry out slightly. Cover can now be slid off as seen in Fig. 1.
2. To remove bottom cover insert pocket screwdriver into cover as shown in Fig. 1 above and exert slight out force. Slide long slender screwdriver under strap and into cover as shown in Fig. 1 above and pry outward until cover can be pulled off as shown in Fig. 2.

Fig. 1



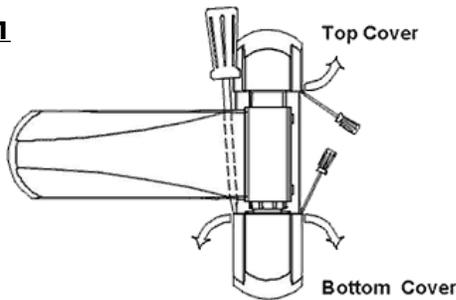


Fig. 2

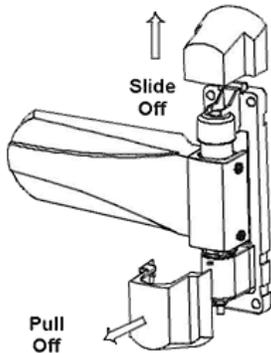

3. Using wrench remove nut as shown in Fig. 3.
4. Remove center-screw and top by extracting screw from assembly as shown in Fig. 3.

Fig. 3

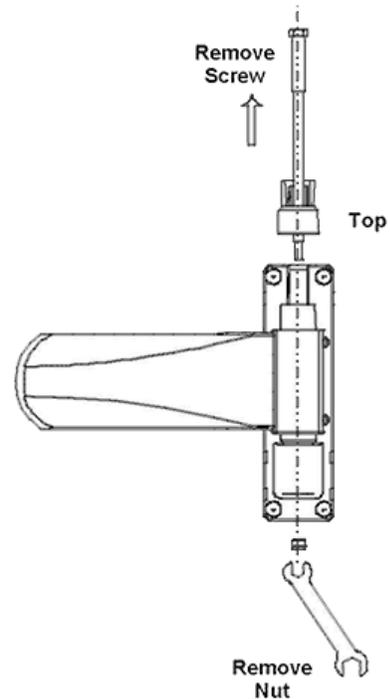

5. Open door and lift door clear of hinges as shown in Fig. 4 and Fig. 5.
6. To replace door, reverse process. Screwdrivers are not used to replace flange covers. Covers will snap in place.

Fig. 4

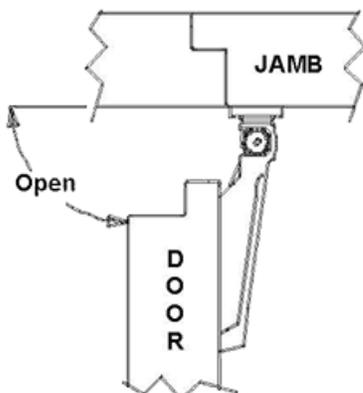


Fig. 5

