


1801 Quick-Mount Hood Fixture

Part Number: 11801 */61801 *

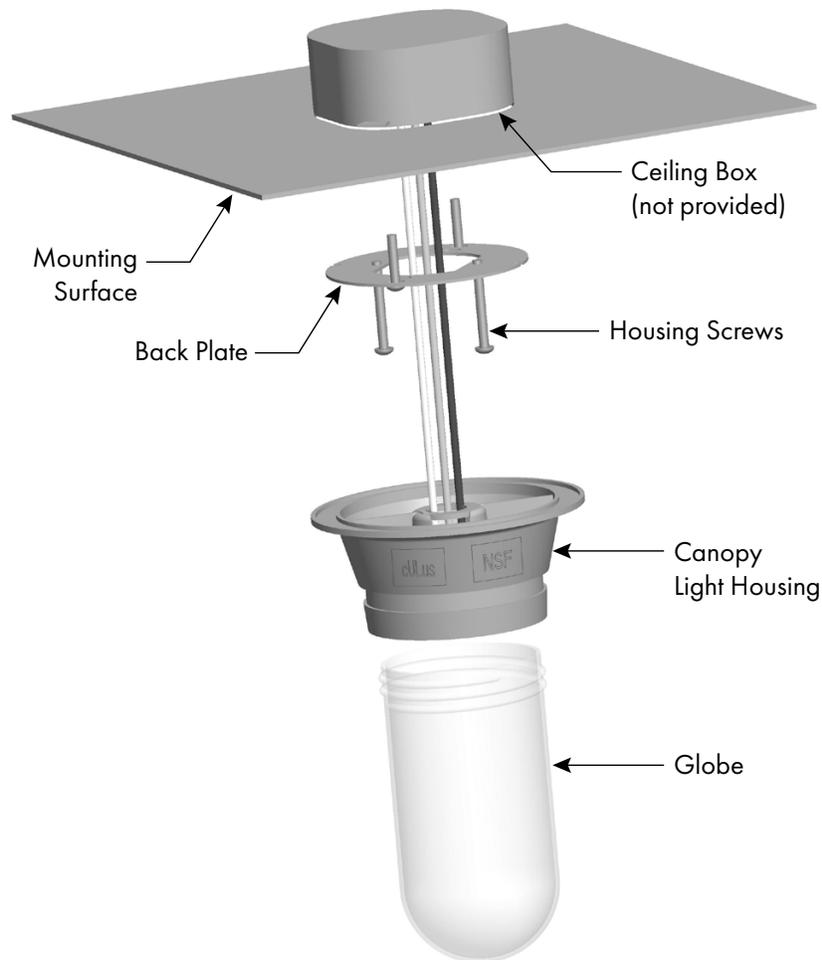

DIRECTIONS

1. Cut a $\text{Ø}2.5''$ hole with two $\text{Ø}0.25''$ holes on either side of the large hole. Confirm the holes are $\text{Ø}3.5''$ apart to match the ceiling box (not supplied).
2. Mount the back plate to the ceiling box with the two ceiling box screws (not supplied). Thread the two long housing screws with a couple of turns into the back plate.
3. Connect the supply and ground wires. **Note:** All wiring must comply with the national electric code.
4. Mount the canopy light to the hood by inserting the keyhole slots in the housing over the heads of the screws and twist counterclockwise and tighten the screws.
5. Screw in a standard incandescent lamp (100 W max).
6. Screw the globe into the housing and hand tighten only.
7. Install no less than 4' (1.2 m) above cooking surface.

CAUTION

- **High surface temperatures:** Install only where the fixture is not mounted on or adjacent to combustible materials

